



Protecting  
Your Digital  
Assets-



Protecting  
Your Digital  
Assets-

Product Models	RTX110-3Q, RTX Secure 110-3Q, RTX111-3Q, RTX Secure 111-3Q, RTX112-3Q, RTX115-3Q, RTX115DC-3Q
Host Interfaces and Speeds	<ul style="list-style-type: none"> <li>eSATA: up to 3.0 Gbps</li> <li>Dual FireWire 800: up to 800 Mbps</li> <li>USB 3.0: up to 5.0 Gbps</li> </ul>
Drive Types Supported	3.5 inch SATA (Serial-ATA) Hard Drives
Operating System Requirements	<ul style="list-style-type: none"> <li>Windows XP, Vista, Windows 7, Windows 8</li> <li>Mac OS X</li> <li>Linux distributions that support the connection type</li> </ul>
Power Supply	100-240VAC +12V/+3V / +3.5A
Cooling Fan	40mm exhaust fan
Shipping Weights	6 pounds without drive, 8 pounds with drive
Dimensions	176mm x 270 mm x 54mm
Support	We don't expect anything to go wrong with your CRU-Dataport product. But if it does, Technical Support is standing by and ready to help. Contact Technical Support through <a href="http://cru-inc.com/support">cru-inc.com/support</a> or call (800) 260-9800 or (360) 816-1800

# RTX® 1-Bay-3Q Quick Start Guide



Models Covered: RTX110-3Q, RTX Secure 110-3Q, RTX111-3Q, RTX Secure 111-3Q, RTX112-3Q, RTX115-3Q, and RTX115DC-3Q (Digital Cinema)

## 1. Identifying Parts

Take a moment to familiarize yourself with the parts of RTX 1-Bay-3Q. This will help you to better understand the remaining instructions.


RTX110-3Q and  
RTX Secure 110-3Q




RTX111-3Q, RTX Secure  
111-3Q and 112-3Q



RTX115-3Q and  
RTX115DC-3Q

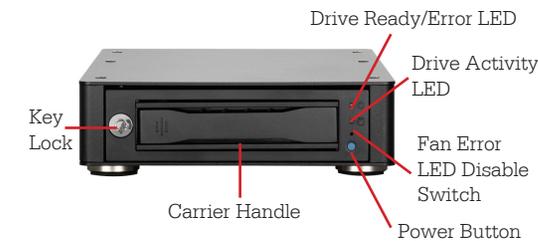

Rear of All Units

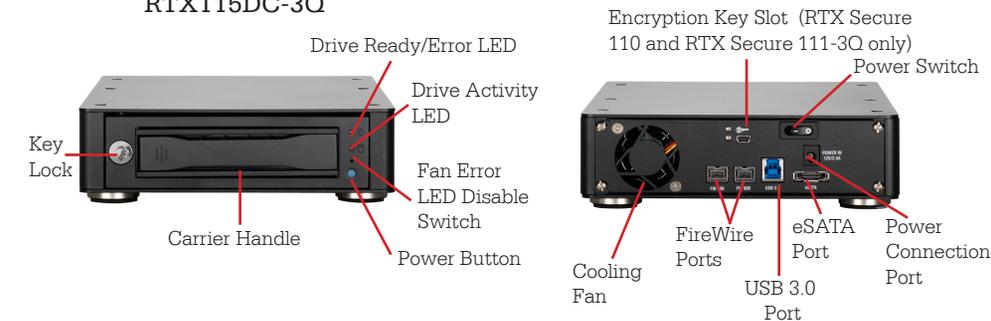

RTX is a registered trademark of CRU Acquisitions Group, LLC. Other marks are the property of their respective owners.  
© 2013 CRU Acquisitions Group, LLC. All rights reserved.

### Limited Product Warranty

CRU-Dataport (CRU) warrants RTX to be free of significant defects in material and workmanship for a period of three years from the original date of purchase. CRU's warranty is nontransferable and is limited to the original purchaser.

### Limitation of Liability

The warranties set forth in this agreement replace all other warranties. CRU expressly disclaims all other warranties, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose and non-infringement of third-party rights with respect to the documentation and hardware. No CRU dealer, agent or employee is authorized to make any modification, extension, or addition to this warranty. In no event will CRU or its suppliers be liable for any costs of procurement of substitute products or services, lost profits, loss of information or data, computer malfunction, or any other special, indirect, consequential, or incidental damages arising in any way out of the sale of, use of, or inability to use any CRU product or service, even if CRU has been advised of the possibility of such damages. In no case shall CRU's liability exceed the actual money paid for the products at issue. CRU reserves the right to make modifications and additions to this product without notice or taking on additional liability.

FCC Compliance Statement: "This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at this own expense.

In the event that you experience Radio Frequency Interference, you should take the following steps to resolve the problem:

1. Ensure that the case of your attached drive is grounded.
2. Use a data cable with RFI reducing ferrites on each end.
3. Use a power supply with an RFI reducing ferrite approximately 5 inches from the DC plug.
4. Reorient or relocate the receiving antenna



## 2. HDD Installation

### 2.1 RTX100-3Q and RTX Secure 110-3Q

- a. Pull the ejection handle, open the door.
- b. Slide in your SATA hard drive, connector-end first.
- c. Shut the door until you hear it click.

### 2.2 RTX111-3Q, RTX Secure 111-3Q, and RTX112-3Q

- a. Slide the drive carrier out of the RTX.
- b. The carrier's cover is held in place by a screw on the rear of the carrier. Remove the screw then remove the cover.
- c. Slide the drive in from the front of the carrier.
- d. Mate the connection on the drive with the connection on the drive carrier circuit board.
- e. Flip the drive/carrier assembly over, while holding the HDD in place. Secure the drive in place with the provided screws.
- f. Attach the Temperature Control Cooling Sensor to the top of the drive with an adhesive strip.
- g. Replace the carrier cover and secure the screw on the rear of the carrier.
- h. Slide the carrier into the RTX.

\*A flashing green LED on the bay indicates bay fan failure. Call CRU technical support.

### 2.3 RTX115-3Q and RTX115DC-3Q

- a. Slide the drive carrier out of the frame.
- b. The carrier's cover is held in place by two screws—one on either side of the carrier. Remove these screws then remove the cover.
- c. Insert the drive into the carrier.
- d. Mate the connection on the drive with the connection on the drive carrier circuit board.
- e. Flip the drive/carrier assembly over, while holding the HDD in place. Secure the drive in place with the provided screws.
- f. Replace the drive cover and secure the screw on the rear of the carrier.
- g. Slide the carrier into the frame assembly.

\*Flashing red and blue LEDs on the bay indicate bay fan failure. Call CRU technical support.

## 3. Connecting and Powering

RTX-3Q can connect to your computer in one of several ways (eSATA, FireWire 800, USB 2.0 and USB 3.0). Choose one of those cables to use and plug it into the product. Connect the power cord to the product and to a grounded electrical outlet.

**NOTE:** To connect RTX-3Q to a USB 2.0 host, you must use the included USB 2.0 cable.

For models with encryption, ensure that the encryption key is inserted and that the lock on the bay is in the 'locked' position.

Switch the product on. The drive will spin up automatically on RTX100-3Q and RTX115DC-3Q. The key lock needs to be in the "locked" position for RTX Secure 110-3Q, RTX111-3Q, RTX Secure 111-3Q and RTX112-3Q to spin up. For RTX115-3Q, press the power button to spin up the drive.

Your RTX 1-Bay-3Q is now ready to use!

## 4. Encryption Information (models with encryption only)

RTX-3Q with encryption uses full disk hardware encryption to encrypt the entire contents of the drive—including the boot sector, operating system and all files—without performance degradation.

The Security Key must be installed prior to powering on the RTX-3Q for the data to be decrypted on the drive. Externally connected Security Keys may be removed and stored in a safe location once they have been accepted. Always store Security Keys apart from the data so that in the event that the drive is lost or stolen, the data is protected.

When a drive is formatted using an encryption key, the same or a duplicate key must be used in order to access the data. There is no "back door" to access the data; lost keys make data recovery virtually impossible.

**WARNING:** Never plug an encryption key into a mini-USB port or a mini-USB product into the encryption key port.