




Protecting
Your Data™

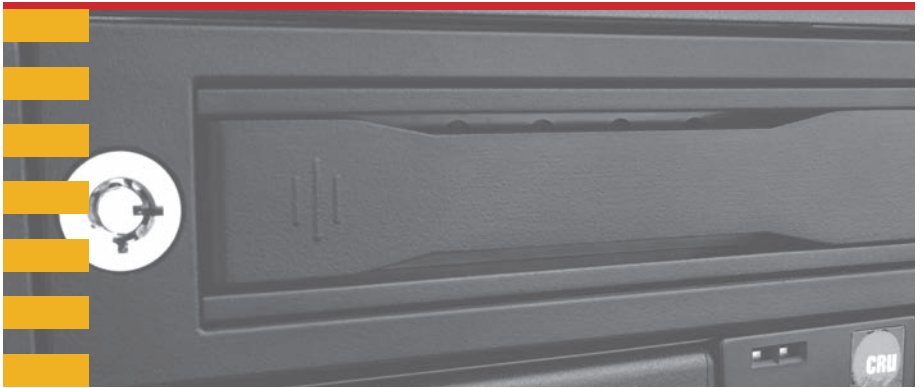

Data Express® DX115 SAS/SATA

Quick Start Guide

Features

- Rugged all-metal construction rated for up to 30,000 carrier insertions
- Flat front for seamless integration
- SAS frames are compatible with SATA drive carriers
- Cableless drive connection
- Soft start circuitry increases data integrity by eliminating in-rush current during spin-up



1. Installation Steps

1.1 Frame Installation

- a. Slide the DX115 frame into an open 5.25" drive bay on your computer.
- b. Secure the frame to the chassis with the mounting screws provided.
- c. Attach a SAS or SATA data cable to the data connector on the rear of the frame. Attach the other end to the appropriate SAS or SATA port on the computer.
- d. Attach a Molex power connector to the rear of the receiving frame.

1.2 Hard Drive Installation

- a. If the carrier is locked into the frame, insert a Data Express Key into the lock and turn it 90 degrees clockwise.
- b. Push in on the ejection handle of the carrier to pop it out. Use the handle to remove the carrier from the frame.
- c. Use a Phillips screwdriver to remove the two screws securing the carrier cover. The screws are located on either side of the front of the carrier.
- d. Remove the cover and attach a 3.5-inch or 2.5-inch drive to the unified power and data connector inside of the carrier.
- e. With one hand on the top of the drive, turn the carrier over. Then secure the drive to the carrier using the mounting screws provided.
- f. Reattach the carrier cover and secure it using the two screws you removed in Step C.

2 Operating Your DX115

2.1 Basic Operation

- a. Slide the DX115 carrier into the frame, then push the carrier handle in until it clicks.
- b. Insert the included Data Express Key into the keylock and turn it 90 degrees counter-clockwise to secure the carrier to the frame.
- c. Press and hold the Power Button to power the unit on until the Drive Ready LED begins to flash and the hard drive inside begins to spin up.

Your DX115 is now ready to use! If the drive inside is already formatted, it can be used right away. If the drive is brand new or its format is not compatible with your computer, the drive will need to be formatted before being used.

STOP!

Formatting a drive will erase all data on the drive, so be sure to back up your data before beginning this operation.



2.2 Safe Carrier Removal

- a. Power off the unit by pressing the power button.

NOTE To prevent the possibility of losing data, ensure there are no file transfers in progress and the amber Drive Activity LED is off before turning off the DX115.

- b. Use the DataExpress Key to turn the keylock 90 degrees clockwise to unlock the unit.
- c. Push in on the ejection handle of the carrier to pop it out. Use the handle to remove the carrier from the frame.

3 Other Configuration Options

3.1 LED Activity

LED Name	Color	State	Description
Drive Ready/Error	Blue/Red	Flashing Blue	Carrier is inserted and the drive inside is powering up.
		Solid Blue	Drive is powered on and ready for access.
		Flashing Red and Blue	Fan failure. Please contact Technical Support.
		Solid Red	DC power failure. Please contact Technical Support.
Drive Activity	Amber	Flashing	Indicates when the host computer is accessing data on the drive.*


*Some SATA PC systems/host controllers provide support for the Drive Activity LED feature (refer to the SATA PC system/host controller manufacturer's documentation for further information). The Drive Activity LED can be enabled via host connection (cable not included) to Pin 1 located on the receiving frame motherboard. Refer to the SATA PC system/host controller manufacturer's documentation for further information.

3.2 Fan Error LED Disable Switch

This switch allows the user to disable the Fan Error LED. It is a pinhole located on the front of the DX115 frame just above the power button. Insert a paper clip or similar object to activate the switch. CRU® recommends replacing a faulty fan immediately. Contact Technical Support to obtain a new fan.

3.3 Jumper Chart

The following jumper chart indicates the functionality for each position on the jumper block located on the rear of the DX115.



Product Models	DataExpress DX115
Interface Types & Speeds	SATA: up to 6 Gbps SAS: up to 6 Gbps
Supported Drive Types	2.5-inch and 3.5-inch SATA hard drives and SSDs 2.5-inch and 3.5-inch SAS hard drives and SSDs
Data Connectors	One (1) SATA connector
Insertion Rating	Up to 30,000 carrier insertions
Torque	2.5-inch drives, M3 screws: 4 inch-pounds max. 3.5-inch drives, #6-32 screws: 6 inch-pounds max.
Supported Operating Systems	Windows 10, 8, and 7 Windows Server 2016, 2012 and 2008 product families OS X/macOS 10.11 "El Capitan" or newer Linux distributions that support the connection type used
Compliance	EMI Standard: FCC Part 15 Class B EMC Standard: EN55022, EN55024 CE, RoHS, RCM
Product Weight	Unpopulated: 2.5 pounds (1.13 kg) Populated: 4.15 pounds (1.88 kg)
Product Dimensions	5.83in W x 8.07in L x 1.61in H (148mm W x 205mm L x 41mm H)
Technical Support	Your investment in CRU products is backed up by our free technical support for the lifetime of the product. Contact us through our website, cru-inc.com/support or call us at 1-800-260-9800 or +1-360-816-1800.

©2018 CRU Acquisition Group LLC, ALL RIGHTS RESERVED. CRU® and Data Express® are trademarks of CRU Acquisition Group, LLC and are protected by trademark law.

Product Warranty

CRU warrants this product to be free of significant defects in material and workmanship for a period of five years from the original date of purchase. CRU's warranty is nontransferable and is limited to the original purchaser.

Limitation of Liability

The warranties set forth in this agreement replace all other warranties. CRU expressly disclaims all other warranties, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose and non-infringement of third-party rights with respect to the documentation and hardware. No CRU dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty. In no event will CRU or its suppliers be liable for any costs of procurement of substitute products or services, lost profits, loss of information or data, computer malfunction, or any other special, indirect, consequential, or incidental damages arising in any way out of the sale of, use of, or inability to use any CRU product or service, even if CRU has been advised of the possibility of such damages. In no case shall CRU's liability exceed the actual money paid for the products at issue. CRU reserves the right to make modifications and additions to this product without notice or taking on additional liability.

FCC Compliance Statement: "This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a home or commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

In the event that you experience Radio Frequency Interference, you should take the following steps to resolve the problem:

- 1) Ensure that the case of your attached drive is grounded.
- 2) Use a data cable with RFI reducing ferrites on each end.
- 3) Use a power supply with an RFI reducing ferrite approximately 5 inches from the DC plug.
- 4) Reorient or relocate the receiving antenna.

