




Protecting
Your Data™

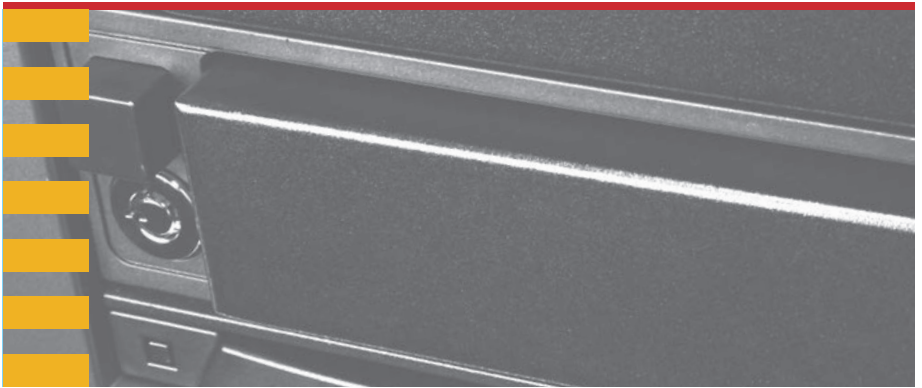

Data Express® DX175

Quick Start Guide

Features

- Short frame length is ideal for fitting in smaller computers
- Toolless entry into the drive carrier
- Temperature Control Cooling System auto-adjusts fan speed depending on need
- Push-button carrier ejection mechanism
- Keylock secures the carrier from accidental ejection
- Rated for up to 50,000 carrier insertions



1 Frame Installation

- a. Slide the DX175 receiving frame into an open 5.25-inch drive bay on your computer.
- b. Secure the frame to the chassis with the mounting screws provided.
- c. Attach a SAS or SATA data cable to the SAS/SATA data connector on the rear of the frame and attach the other end to the appropriate SAS or SATA host inside your computer.
- d. Attach a SATA power connector from your computer to the rear of the frame.

2 Drive Installation

- a. Unlock the carrier if it is locked into the frame. Insert a Data Express Key into the lock and turn it 90 degrees counterclockwise.
- b. Push in on the ejection button of the carrier to pop it out.
- c. Press in on the button securing the cover to the rear of the carrier and lift the cover upwards to remove it.
- d. Mount a 3.5-inch or 2.5-inch drive inside of the carrier.
- e. With one hand on top of the drive, turn the carrier over. Then secure the drive to the carrier using the screws provided.
- f. Reattach the carrier cover. Insert the front of the carrier into the front of the cover while simultaneously lowering the cover over the top of the carrier.

3 Operating Your DX175

3.1 Powering on the DX175

- a. Insert the DX175 carrier into the frame. Push it in until the carrier clicks.
- b. You may optionally secure the carrier to the frame. Insert the provided Data Express Key into the keylock and turn it 90 degrees clockwise.
- c. To power the DX175 on, press and hold the power button until the Drive Ready LED begins to flash.

NOTE

If a carrier containing a drive is already installed into the receiving frame before a system power up, you do not have to press and hold the switch to power on the drive. The DX175 will turn on automatically when the system is powered on.



Your DX175 removable drive enclosure is now ready to use! If the drive inside is already formatted, it can be used right away. If the drive is brand new or its format is not compatible with your computer, the drive will need to be formatted before being used.

STOP! Formatting a drive will erase all data on the drive, so be sure to back up your data before beginning this operation.

3.2 Ejecting A Carrier

- Turn off the computer or properly dismount the drive from the system. To dismount the drive, ensure there are no file transfers in progress and the white Drive Activity LED is off before turning the DX175 off.
- Unlock the carrier if it is locked into the frame. Insert a Data Express Key into the lock and turn it 90 degrees counterclockwise.
- Press in on the eject button to eject the carrier.

4 LED Behavior

LED	Color	STATE	Description
Drive Ready/Error	White/ Red	Flashing White	The carrier is inserted in the frame and the drive inside the carrier is powering up.
		Solid White	The drive is powered on and ready for access.
		Flashing Red and White	Fan failure. Please contact Technical Support.
		Solid Red	DC power failure. Please contact Technical Support.
Drive Activity	White	Flashing	The drive inside the bay is being accessed by your computer. See Section 3.2 for configuration instructions.
		Solid	The computer's SAS or SATA host controller does not support drive activity polling. See Section 3.2 for configuration instructions.

Product Models	Data Express DX175
Interface Types & Speeds	SATA: up to 6 Gbps SAS: up to 6 Gbps
Supported Drive Types	2.5-inch and 3.5-inch SATA hard drives and SSDs 2.5-inch and 3.5-inch SAS hard drives and SSDs
Data Connectors	One (1) SATA connector
Insertion Rating	Up to 50,000 carrier insertions
Torque	2.5-inch drives, M3 screws: 4 inch-pounds max. 3.5-inch drives, #6-32 screws: 6 inch-pounds max.
Supported Operating Systems	Windows 10, 8, and 7 Windows Server 2016, 2012 and 2008 product families OS X/macOS 10.11 "El Capitan" or newer Linux distributions that support the connection type used
Compliance	EMI Standard: FCC Part 15 Class B EMC Standard: EN55024, EN55032 CE, RoHS, RCM
Product Weight	1.2 pounds (0.54 kg)
Product Dimensions	With Fan: 5.75in W x 7.37in L x 1.66in H (147mm W x 187mm L x 42mm H) Without Fan: 5.75in W x 6.77in L x 1.66in H (147mm W x 172mm L x 42mm H)
Technical Support	Your investment in CRU products is backed up by our free technical support for the lifetime of the product. Contact us through our website, cru-inc.com/support or call us at 1-800-260-9800 or +1-360-816-1800.

©2018 CRU Acquisition Group LLC, ALL RIGHTS RESERVED. CRU® and Data Express® are trademarks of CRU Acquisition Group, LLC and are protected by trademark law.

Product Warranty

CRU warrants this product to be free of significant defects in material and workmanship for a period of five years from the original date of purchase. CRU's warranty is nontransferable and is limited to the original purchaser.

Limitation of Liability

The warranties set forth in this agreement replace all other warranties. CRU expressly disclaims all other warranties, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose and non-infringement of third-party rights with respect to the documentation and hardware. No CRU dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty. In no event will CRU or its suppliers be liable for any costs of procurement of substitute products or services, lost profits, loss of information or data, computer malfunction, or any other special, indirect, consequential, or incidental damages arising in any way out of the sale of, use of, or inability to use any CRU product or service, even if CRU has been advised of the possibility of such damages. In no case shall CRU's liability exceed the actual money paid for the products at issue. CRU reserves the right to make modifications and additions to this product without notice or taking on additional liability.

FCC Compliance Statement: "This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a home or commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

In the event that you experience Radio Frequency Interference, you should take the following steps to resolve the problem:

- 1) Ensure that the case of your attached drive is grounded.
- 2) Use a data cable with RFI reducing ferrites on each end.
- 3) Use a power supply with an RFI reducing ferrite approximately 5 inches from the DC plug.
- 4) Reorient or relocate the receiving antenna.

